

Coil Piston Replacement and Installation


1. Disconnect the flanged pipe joint.



2.Remove the Piston,Piston sleeve and Outer o-ring.





3.The assembly sequence is as follows:

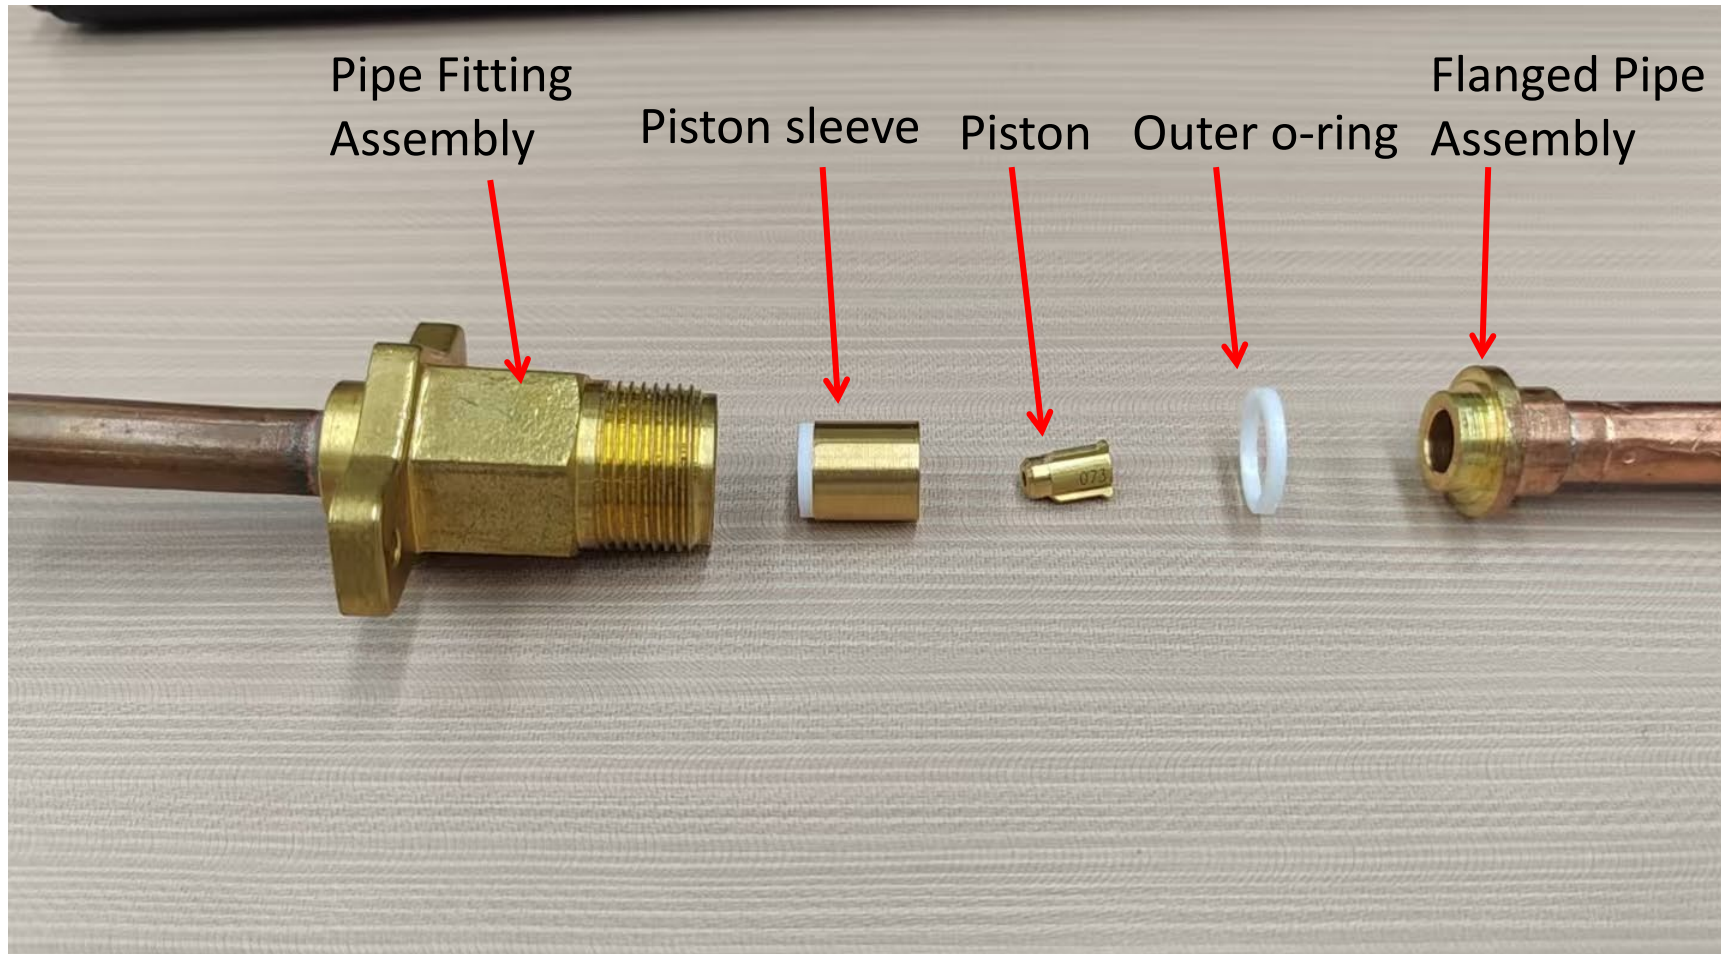


4. Install the Piston into the Piston sleeve in the direction shown, then insert the Piston sleeve assembly into the pipe fitting, with the seal ring of the Piston sleeve facing inward.



5. Installation the Outer o-ring.

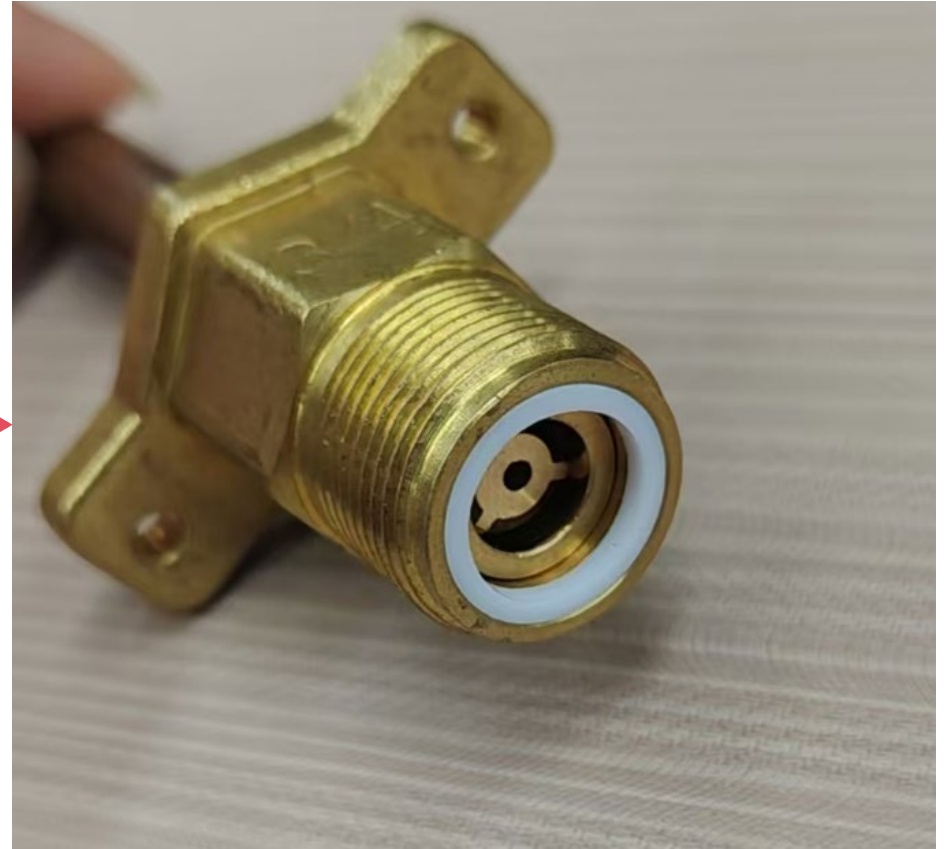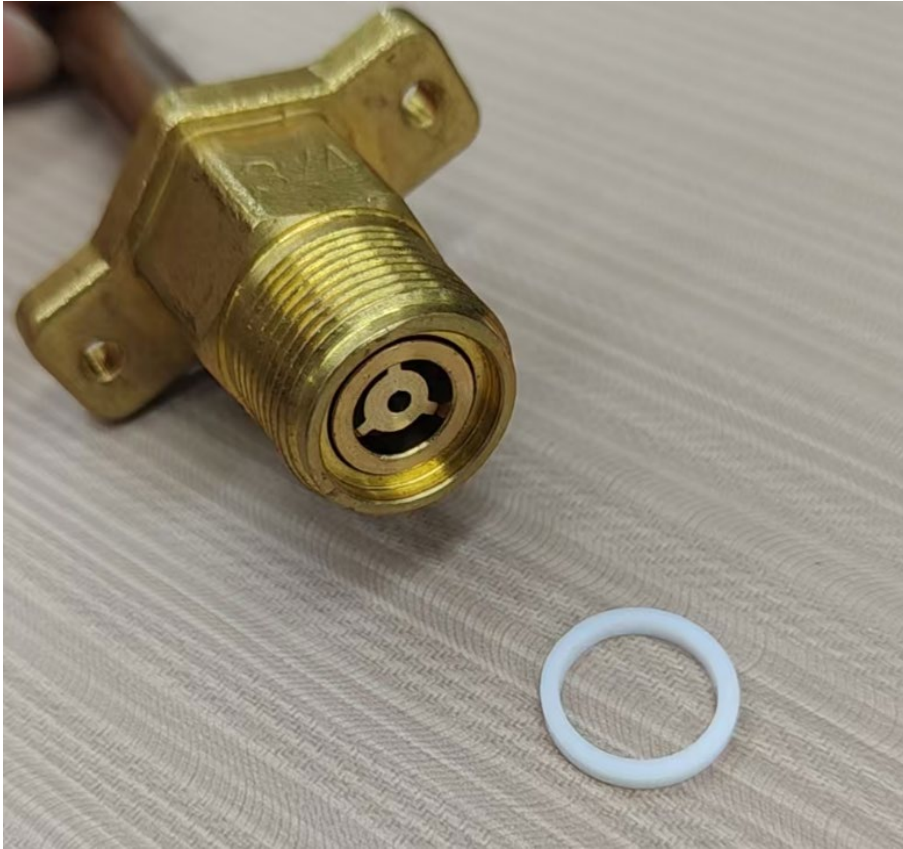

6.Reinstall the flanged pipe assembly.

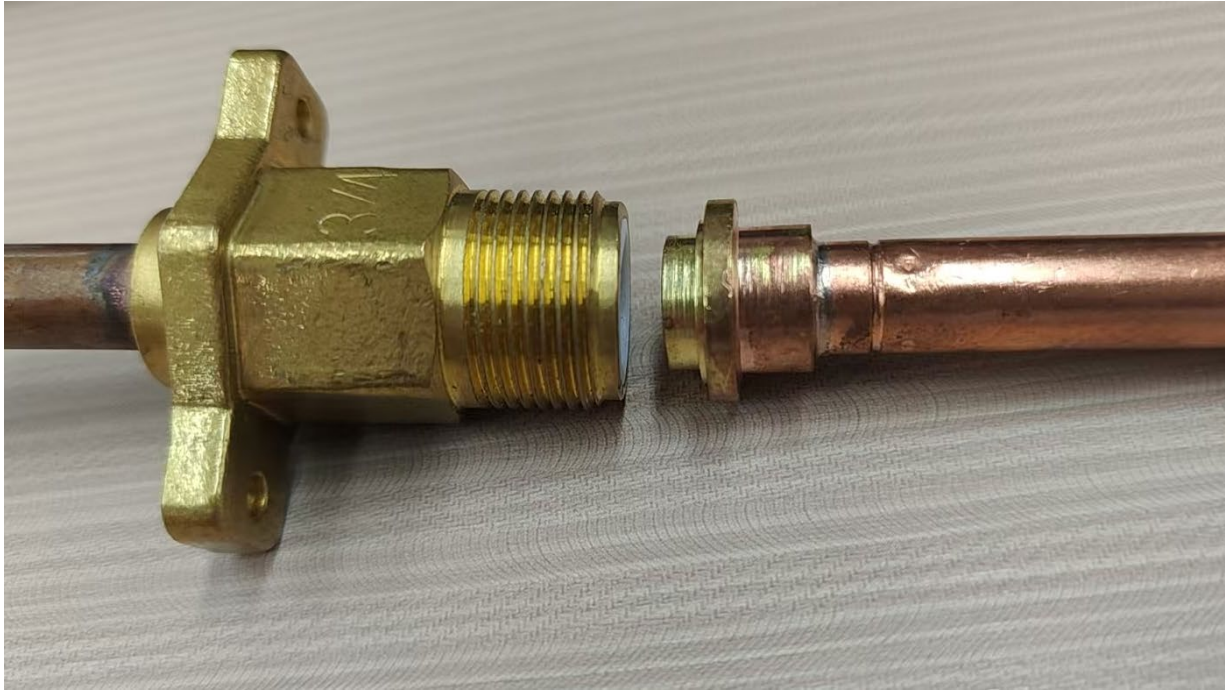

7.Tighten the pipe nut.

